# Ninja BB Installation Instructions




- Do not alter this product in any way as it can cause unseen damage. Any modifications to this product will void the warranty.
  TOKEN suggests taking your bottom bracket to your local authorized TOKEN dealer for installation, service and adjustments.
- Read the user's guide before installation and use. Follow all instructions carefully. If you have any questions, don't ride the bike. Take it to your local TOKEN dealer for assistance. BEFORE RIDING:
- Check that there is no side-to-side movement in the bottom bracket. Also check that the cranks spin smoothly. If there is movement or the bottom bracket is not smooth, take the bicycle to your local TOKEN dealer for service or replacement.
- Ensure that the cranks are firmly attached to the bottom bracket. Improperly attached cranks can become detached from the bicycle and serious injury can result. Never ride a bicycle with improperly attached cranks.

## AFTER RIDING:

. When cleaning the bottom bracket, only use mild soap and water. Never spray the bottom bracket with high-pressure water. Water can enter the bottom bracket and cause it to wear prematurely.

All TOKEN products are guaranteed against defects in materials or workmanship for two (2) years from the original date of purchase. This warranty applies to the original owner only and is not transferable. The warranty is considered void if resold. The warranty does not cover normal wear and tear or damage from abuse. Please see our website or contact your local dealer or distributor for more details

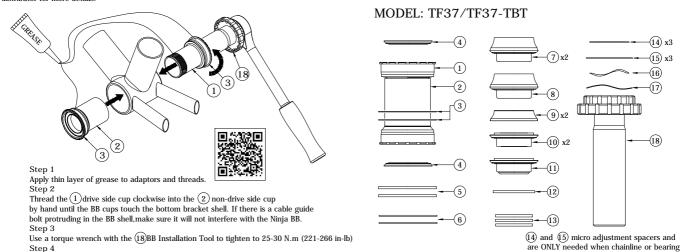


Install any necessary adaptor, according to this manual.

Note: If the bottom bracket cup can be pressed into he frame by hand without effort, the frame BB shell may be oversized and #C3" cups or adapters (sold separately) may be required. Contact your local dealer, or TOKEN via our website for more information.

www.tokenproducts.com

preload need to be changed.

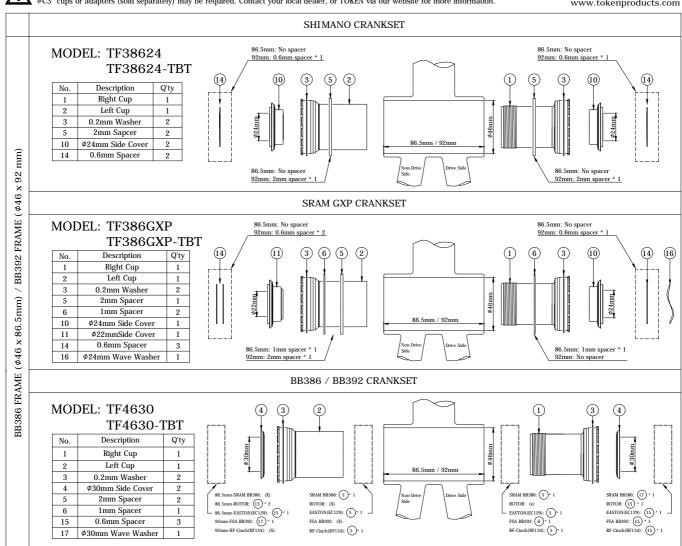

### www.token products.comSHIMANO CRANKSET MODEL: TF4624 68mm-Road: No spacer 73mm-MTB: 2mm spacer \* 1 TF4624-TBT Description Q'ty No. 7 (2) (7) (13) 3 (1) (3) Right Cup 1 1 Left Cup 2 1 3 2 0.2mm Washer 7 2 Ø24mm Side Cover 13 2mm Spacer 68mm / 73mm SRAM GXP CRANKSET MODEL: TF46GXP 68mm-Road: No spacer 73mm-MTB: 0.6mm \* 1 + 2mm spacer \* 1 TF46GXP-TBT Q'ty Description No. 14(13) (16) 3 (5) 2 (8) (1) (3) (7)Right Cup 1 1 Left Cup 2 1 3 0.2mm Washer 2 5 2mm Spacer 1 7 Ø24mm Side Cover 8 Ø22mm Side Cover 13 2mm Spacer 0.6mm Spacer 14 PF30 FRAME (\$46 x 68mm/73mm) 16 Ø24mm Wave Washer FSA BB386 / BB392 CRANKSET MODEL: TF46386 68mm-BB386: No spacer 73mm-BB392: 0.6mm spacer \* 1 TF46386-TBT No. Description Q'ty (17) (9) (4) (3) (2) (5) (4) (9) (15) (1) (3) Right Cup 1 Left Cup 2 3 0.2mm Washer 4 Ø30mm Side Cover 5 2mm Spacer Ø30mm Conical Spacer 9 2 68mm / 73mm 0.6mm Spacer 15 17 Ø30mm Wave Washer \*1: 5 is ONLY needed for BB392 with 73mm BB shell. BB30 CRANKSET MODEL: TF4630 68mm-Road: No spacer 73mm-MTB: 0.6mm \* 3 + 2mm spacer \* TF4630-TBT Description No. Q'ty (17) 3 2 (1) (4) (15) (3) Right Cup 1 1 Left Cup 2 3 0.2mm Washer 2 4 Ø30mm Side Cover 2

5

12

15

17

2mm Spacer

2mm Spacer

0.6mm Spacer

Ø30mm Wave Washer

1

3

\*1: (5) is ONLY needed for MTB with 73mm BB shell