# Press Thread BB Adaptor Installation Instructions



www.tokenproducts.com

IMPORTANT NOTICE:

• Do not alter this product in any way as it can cause unseen damage. Any modifications to this product will void the warranty.

• TOKEN suggests taking your bottom bracket to your local authorized TOKEN dealer for installation, service and adjustments.

• Read the user's guide before installation and use. Follow all instructions carefully. If you have any questions, don't ride the bike. Take it to your local TOKEN dealer for assistance.

### BEFORE RIDING:

• Check that there is no side-to-side movement in the bottom bracket. Also check that the cranks spin smoothly. If there is movement or the bottom bracket is not smooth, take the bicycle to your local TOKEN dealer for service or replacement.

• Ensure that the cranks are firmly attached to the bottom bracket. Improperly attached cranks can become detached from the bicycle and serious injury can result. Never ride a bicycle with improperly attached cranks.

#### AFTER RIDING:

• When cleaning the bottom bracket, only use mild soap and water. Never spray the bottom bracket with high-pressure water. Water can enter the bottom bracket and cause it to wear prematurely.

#### WARRANTY:

All TOKEN products are guaranteed against defects in materials or workmanship for two (2) years from the original date of purchase. This warranty applies to the original owner only and is not transferable. The warranty is considered void if resold. The warranty does not cover normal wear and tear or damage from abuse. Please see our website or contact your local dealer or distributor for more details.

## MODEL: TK4624 Step 1 Description Q'ty No. Thread the BB cups into the (1) right adaptor and (2) left adaptor by hand, **Right Adaptor** 1 1 ensuring they are tightened according to the directions. Left Adaptor 2 1 Hole adaptor stationary with BB tool. Use a torque wrench to tighten the BB cup to 35-50 N.m (310-443 in-lb). Step 2 Press the BB cups into the frame using BB press tool. ששישות Г Д φ46 ľ 68/73mm lon-Dri Side Only apply pressure to flange when installing to prevent bearing damage.